


*: VACANT

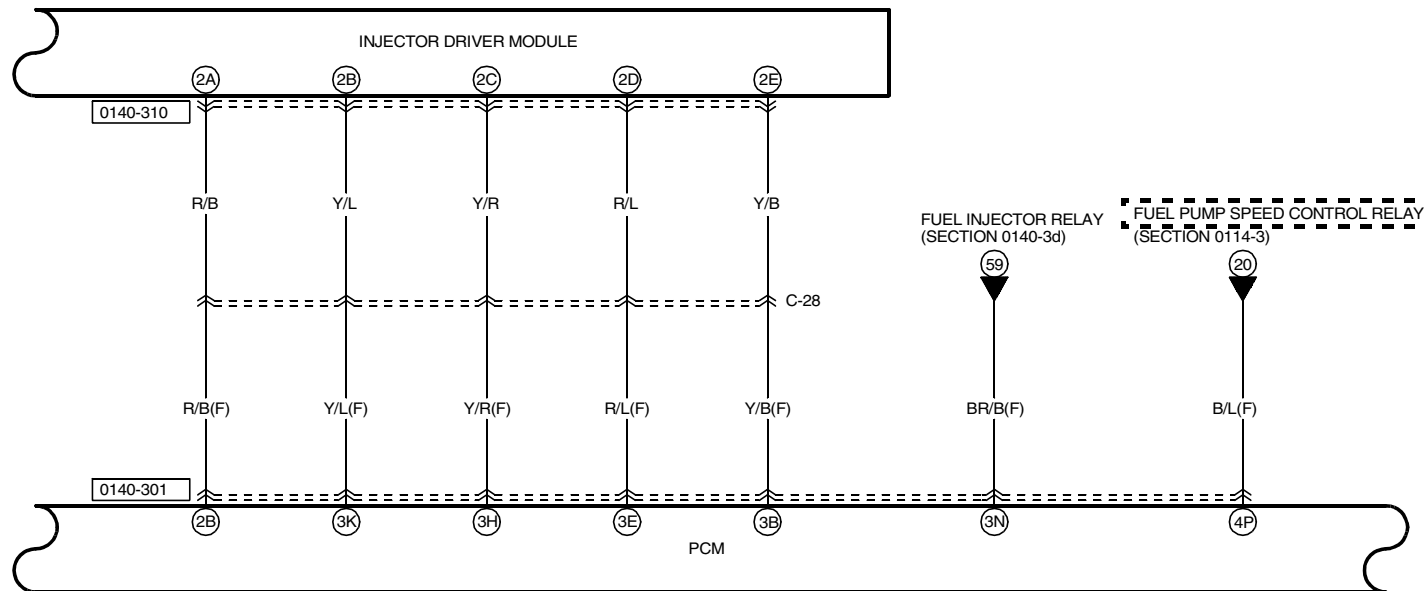

0140-301

PCM(F)

12AB	2Y	2V	2S	2P	2M	2J	2G	2D	2A
B/L	W	L/B	Y	BR	G	R	W	B	L/Y
2AC	2Z	2W	2T	2Q	2N	2K	2H	2E	2B
B/L	W/B	O	G	O/L	*	R/W	BR/R	R	R/B
2AD	2AA	2X	2U	2R	2O	2L	2I	2F	2C
B/R	*	B/Y	R	L	*	*	*	*	G

3Y	3V	3S	3P	3M	3J	3G	3D	3A
*	*	R/W	V/R	BR/Y	BR/B	GY	W	R/G
3Z	3W	3T	3Q	3N	3K	3H	3E	3B
L	B	G/O	P/L	BR/B	Y/L	Y/R	R/L	Y/B
3AA	3X	3U	3R	3O	3L	3I	3F	3C
Y	W	*	*	*	*	*	*	L


4AB	4Y	4V	4S	4P	4M	4J	4G	4D	4A
L/W	L/B	P	BR/Y	B/L	Y	GY	P	R/G	R/B
4AC	4Z	4W	4T	4Q	4N	4K	4H	4E	4B
B/L	W/G	*	L/Y	Y/B	B/O	L/O	L/Y	*	*
4AD	4AA	4X	4U	4R	4O	4L	4I	4F	4C
W/B	*	B/L	*	*	*	GY/L	W/L	*	*

0140-310

INJECTOR DRIVER MODULE(SHORT CORD)

5G	2F	2E	2D	2C	2B	2A
B/L	G/Y	Y/B	R/L	Y/R	Y/L	R/B

HARNESS SYMBOL :  (F)  (E)  (D)  (R)

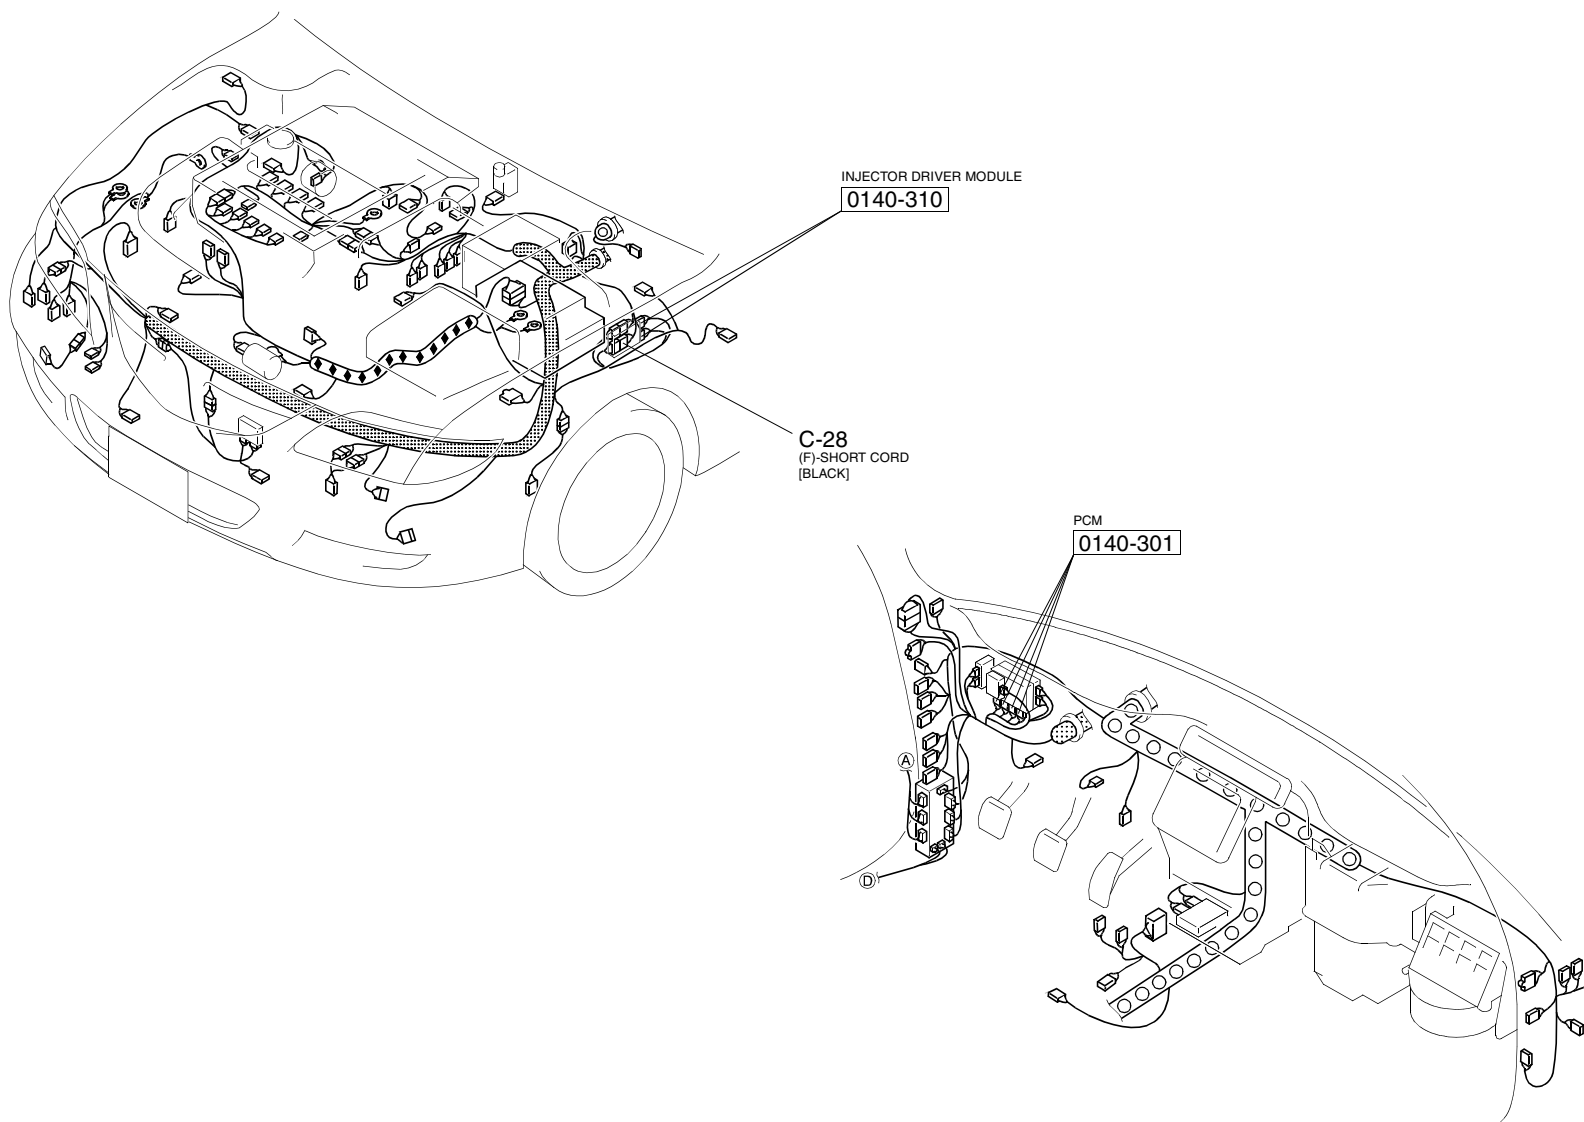

01 ENGINE
40 CONTROL SYSTEM

0140-3e