
 


## Engine Sensors

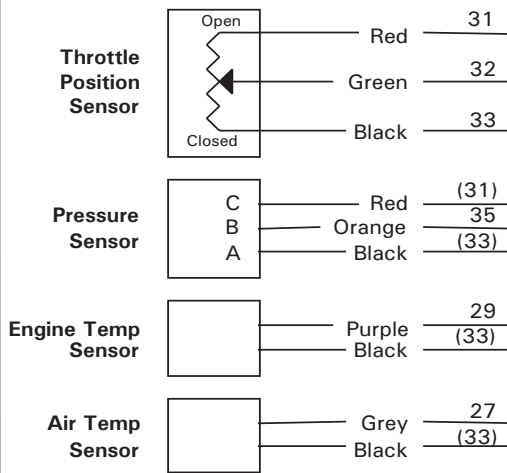

## Trigger Sensor

(Refer to the detailed drawings for the particular trigger system)



**Note 3**

### Note

All wires except those marked "Heavy" are 18# (0.85 mm2)



### Note 2

The Ignition System power should be supplied by the Fuel Pump relay to ensure that the Ignition System power is off when the engine is stopped. This also provides reverse battery protection for the Ignition System

### Note 3

Remove the Foil and drain wire DO NOT connect the foil or drain wire to the sensor or to ground

## Fuel Injectors

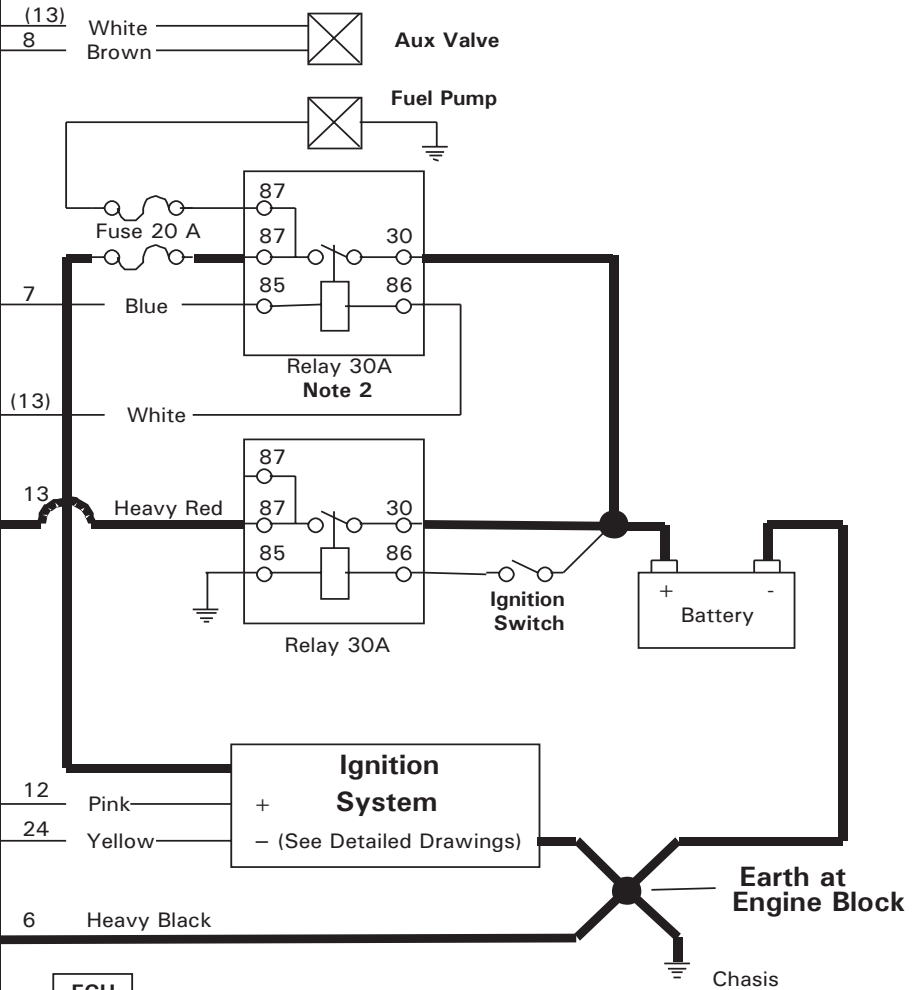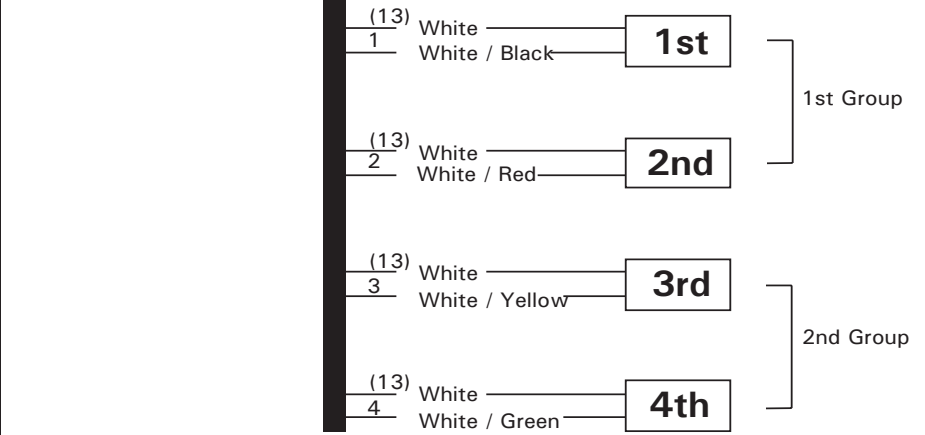

ECU Fuse 20A

Cut Link for Magnetic Trigger Sensor

**MoTeC**

**MoTeC**

Title **2 Group 2D/3D Loom**

Date 16/02/2001

Drawn ST

App AD

Products ECU

Sheet No

1 of 1

Drawing No

**L02**