


## Mitsubishi Evo VIII 260 ECU Connections

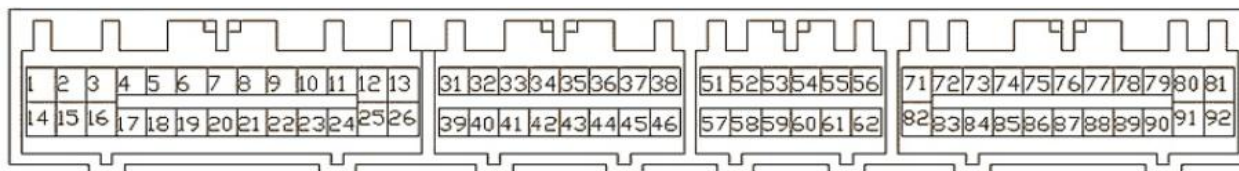

View on wire side

1 INJECTOR 1	O		31 N/C		51 IMMOBILISER	R - W		71 START	B - R	
2 INJECTOR 3	G		32 A/C FAN RELAY HI	G - R		52 N/C		72 AIR TEMP	R - L	
3 FUEL PRESS SOL	W - B		33 ALTERNATOR G	L - W		53 N/C		73 N/C		
4 IDLE SERVO 1	L - Y		34 A/C FAN RELAY LO	L		54 LAMBDA HTR REAR	L - Y		74 N/C	
5 IDLE SERVO 4	R - G		35 I/C SPRAY W/L	R - Y		55 I/C SPRAY RELAY	R - W		75 LAMDA REAR	W
6 EGR SOLENOID	G - O		36 ECU W/L	W - L		56 N/C		76 LAMBDA	W	
7 N/C			37 PAS SWITCH	R - W		57 N/C		77 N/C		
8 A/C RELAY	P		38 ECU RELAY	R		58 TACHO	G - W		78 KNOCK SENSOR	W
9 PURGE SOLENOID	Y - G		39 FUEL PUMP RELAY 3	R - B		59 N/C		79 DIAGNOSTICS	G - W	
10 IGN COIL 1	B - Y		40 SIGNAL GROUND	B		60 LAMBDA HEATER	L - R		80 BACK UP SUPPLY	R - B
11 WASTE GATE SOL	LG		41 ALTERNATOR FR	W		61 N/C		81 VREF 5V	GR	
12 12V SW SUPPLY	R - Y		42 N/C			62 DIAGNOSTICS (7)	O		82 IGN SW SUPPLY	B - R
13 GROUND	B		43 CLUTCH SWITCH	LG				83 WATER TEMP	Y - W	
14 INJECTOR 2	W - R		44 I/C SPRAY AUTO	L - W				84 TPS	G	
15 INJECTOR 4	R		45 A/C PRESS SW	P				85 BARO PRESS	Y - L	
16 N/C			46 N/C					86 ROAD SPEED	B - Y	
17 IDLE SERVO 3	Y							87 ACD/AYC SIGNAL IN	R - Y	
18 IDLE SERVO 6	LG							88 CAM SENSOR	L - R	
19 AIR FLOW RESET	L - B							89 CRANK SENSOR	BR - G	
20 N/C	L							90 AIR FLOW SENSOR	W - R	
21 RAD FAN SPEED	L							91 I/C SPRAY MANUAL	L - R	
22 FUEL PUMP RELAY 2 V								92 SENSOR GROUND	B	
23 IGN COIL 2	B - G									
24 A/C CONTROL UNIT	G - Y									
25 12V SW SUPPLY	R - Y									
26 GROUND	B									

© grants and MLR