

| ECU Manager Set-up | | | |
|--------------------|------------|---------|----------------|
| Manufacturer | Mitsubishi | Vehicle | |
| Part # | H6T 10271A | Engine | Allegedly VQ30 |




Coil on plug Falling edge trigger

Ignition Coil Battery Compensation Table (msec)

tested DPM

| Volts | Bat Comp (msec) | Knee Current |
|-------|-----------------|--------------|
| 8 | 2.7 | 5.1A |
| 9 | 2.3 | 5.4A |
| 10 | 2.0 | 5.5A |
| 11 | 1.8 | 5.5A |
| 12 | 1.6 | 5.6A |
| 13 | 1.4 | 5.7A |
| 14 | 1.3 | 5.8A |
| 15 | 1.2 | 5.9A |
| 16 | 1.1 | 5.9A |

Ignition Dwell Table

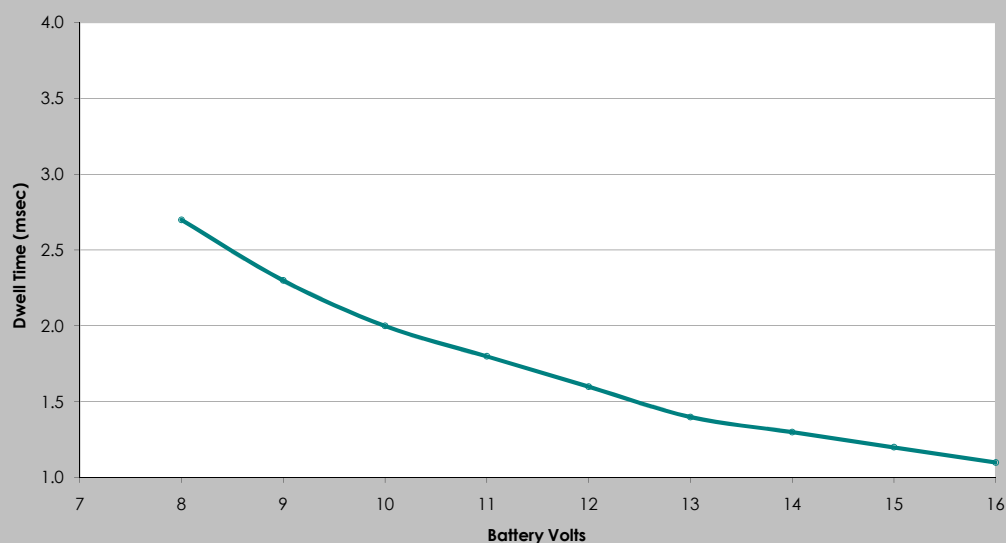

Pin 1: ECU Signal
Pin 2: Earth
Pin 3: 12v

