




## Reference Offset

- Missing Tooth

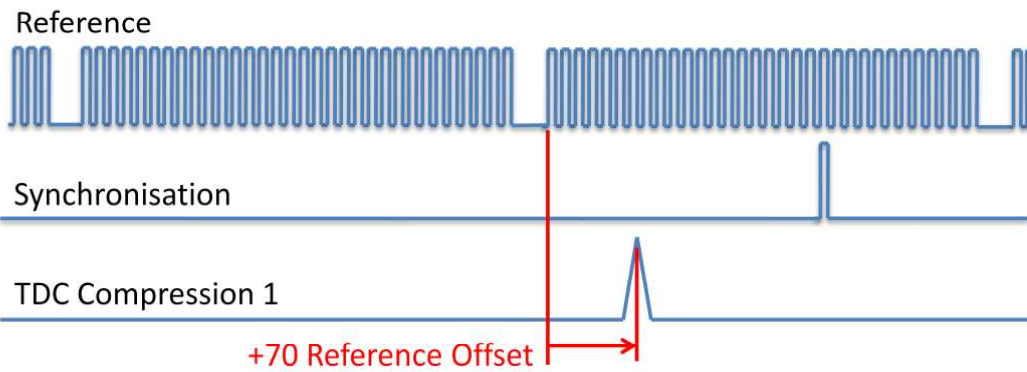


For the Multi Tooth Ref/Sync mode on the previous screen, the *Reference Offset* number will only be different by one tooth, which will generally not be a big change, the number of degrees between teeth.

For a Missing Tooth Mode, the new way of working out the *Reference Offset* means that it is 360 degrees different to the previous CRIP measurement.



## Reference Offset

- The Reference Offset can now be negative or positive
- Best to use the lowest absolute number

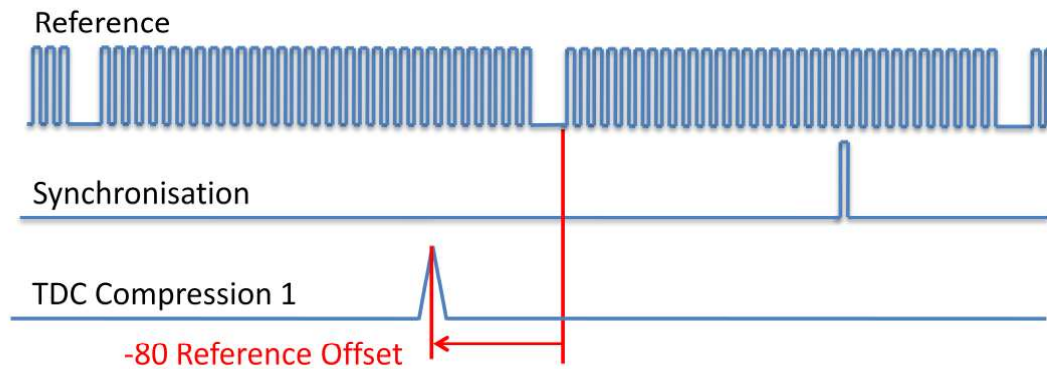

The *Reference Offset* can also be a negative number and it is preferred that the lowest number be used. For example, if the *Reference Offset* works out to be 600 degrees, this would be the same as using -120 degrees. The number of -120 degrees is preferred.